
FPFF162 Filter Fitting Manual

© 2026
All rights reserved



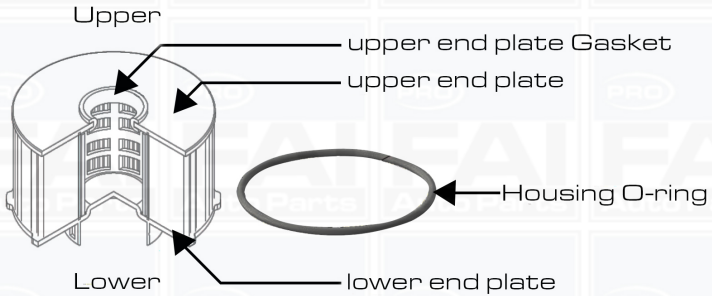

1. Change Housing O-ring and lubricate with grease

2. Lubricate upper end plate gasket with grease

3. Assembly with filter element



4. Assembly with cap.

5. Tighten.
Locking effect is the same as in orange frame above

Although the design of this filter differs from other market equivalents, its performance remains unaffected.
The product is fully compatible and suitable for the specified application.